

## Operating Instructions – Maxmatic 5000

### Batch Feed Mode with Magnitop Plug

- 1) Remove the Magnitop plug and load the unit, do not cram the waste into the unit
- 2) Replace the plug in the “Drain” position
- 3) Turn on the **COLD** tap - a good flow is required
- 4) Turn the Magnitop plug to the “**GRIND**” position and the unit will start
- 5) When the grinding sound has finished, run for a further ten seconds
- 6) Turn the Magnitop plug to the “**DRAIN**” position and turn off the water
- 7) Do not remove the Magnitop plug until the rotor has stopped spinning

### Continuous Feed Mode with Magnitube

- 1) Place the Magnitube in to the unit at the “Drain” position
  - 2) Turn on the **COLD** tap - a good flow is required
  - 3) Turn the Magnitube to the “**GRIND**” position and the unit will start
  - 4) Feed the food waste into the unit - Use a tool like our Dispos’l Mate to push food through the splashguard, **not your fingers**
  - 5) When the grinding has finished, allow the unit to run for about ten seconds
  - 6) Turn the Magnitube to the “**DRAIN**” position and turn off the water
- If you wish to dispose of larger items the Magnitube can be removed to pre load the unit
- 7) Do not remove the Magnitube plug until the rotor has stopped spinning

### DO

- A) Make sure the machine is only operated by a competent person**
- B) Always maintain a good flow (Min four litres per minute) of COLD water to carry the waste away**
- C) Break up large items like cooked bones into smaller lengths to aid in speeding up their disposal**
- D) Mix the various types of waste which will help to dispose of light or stubborn items more speedily**
- E) Stay with the disposer while it is running, it must be attended while in use**
- F) Allow the machine to rest after a run of more than five minutes**

### DON'T

- A) Put metal, plastic, string, glass or cloth into the disposer. These will cause damage**
- B) Use heavy concentrates of detergents or bleaches**
- C) Use hot water as this causes grease to congeal in the waste pipe and subsequent blockages**
- D) Run for long periods, this is a domestic machine which can run for a maximum of 10 minutes**
- E) Try to dispose of raw bones, stringy materials or raw fat**
- F) Dispose of material that may be restricted by local regulations or damage the environment, like tea bags with plastics used in their construction**

### CLEANING

Using plenty of water when disposing of waste and the normal passage of soapy waters will usually keep the unit clean, ice cubes and lemons can be used if there is a build up of waste

## General Instructions – Maxmatic 5000

### If the Maxmatic Stops Working

An overload switch protects your Machine. This will turn off the power if jammed or overloaded

- 1) **FIRST TURN OFF THE POWER SUPPLY**
- 2) Also, select the centre “OFF” position on the control box
- 3) Allow the unit to cool for a few minutes
- 4) Insert the DE-JAM key supplied with your unit and turn in both directions until it rotates freely
- 5) Press the RED reset button on the BOTTOM of the unit
- 6) Select either “ON” position on the control box
- 7) **RESTORE THE POWER SUPPLY**
- 8) Try the unit

### IF THIS FAILS

- 9) Check that your power supply is not fused or tripped
- 10) Contact Max Appliances using [service@max-appliances.co.uk](mailto:service@max-appliances.co.uk) with your serial number

If the power supply cord becomes damaged, this must be replaced by suitable qualified person

### WARRANTY

Providing our installation and operating instructions have been carefully observed, this waste disposer is Guaranteed to the REGISTERED original purchaser at the original domestic address, to be free from defects in material and workmanship for two years labour and ten years service exchange or parts

This guarantee does not apply to any detachable items including the Magnitube or Magnitop, or any costs incurred in the rectification of either faulty installation, aborted installation or jammed machines. This guarantee does not apply where a machine has been abused or in circumstances in which we would normally consider a commercial machine applicable (e.g. establishments providing more than ten meals per sitting, or on a continuous or semi-continuous sitting) If your machine is not registered within fourteen days of purchase, statutory twelve months warranty applies. Proof of purchase must be in registered name of end user