


Reset Button Location and Procedure (2000,3000,4000 and 5000)

Photo's from underneath

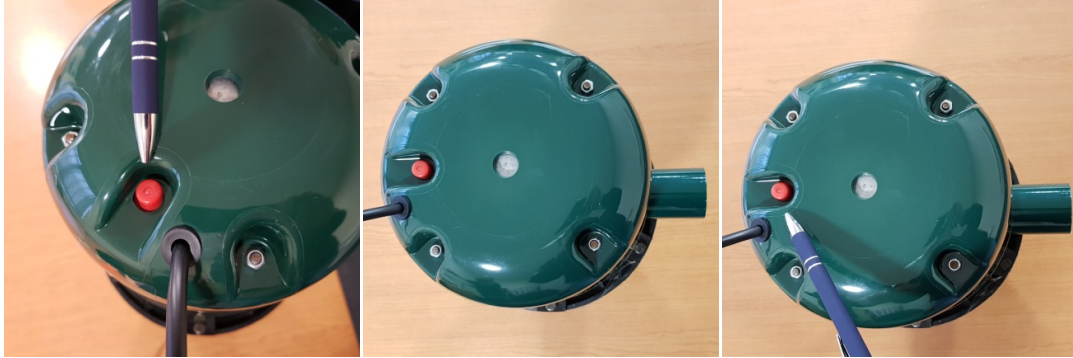

Following a Jam, check the rotor can be turned manually in both directions with the de-jam key, then press the red reset button at the base of the unit, you need to give the reset a firm upwards push and if the unit needed resetting you will hear a “click” making sure the reverse switch is to the left or the right as the centre is off and then try activating the unit again.